



RatGate


RODENT PREVENTION SYSTEM

Contents:

- 1 x Stainless steel RatGate
- 1 x Plastic cable
- 1 x Stainless steel anchor cable with D-shackle
- 1 x Hammer fix screw and 6mm wall plug
- 1 x Caution tag


You will need:

- 1. Hammer
- 2. Drill and 6mm drill bit
- 3. Knife

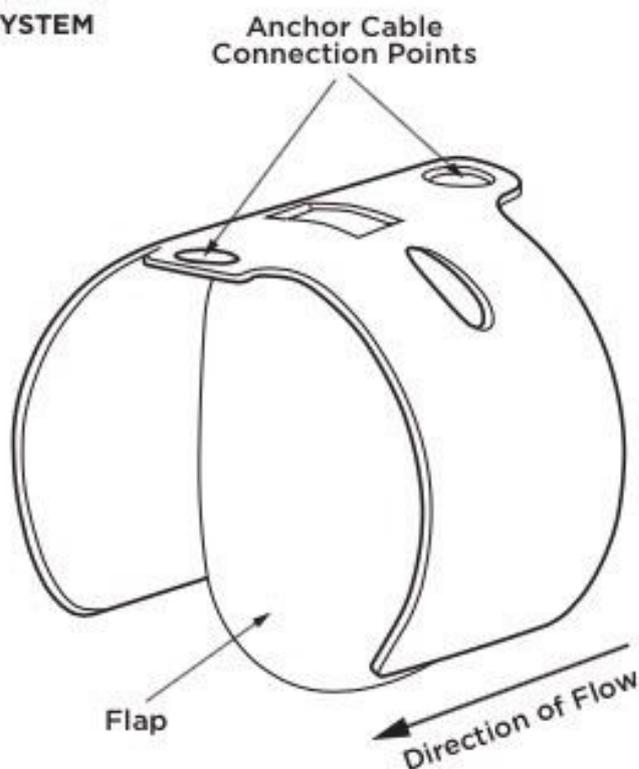

Installation and assembly

1. Connect anchor cable to RatGate using the D-shackle
2. Fit cable tie around the front edge of the RatGate.
3. Tighten cable to gently squeeze the device.
4. Insert RatGate into the pipe.
5. Cut the tie which allows the device to expand and grip the pipe securely.
6. Ensure the flap can move freely
7. Drill a 6mm hole in the suitable place in the manhole wall.
8. Insert wall plug and secure the anchor cable using the hammer fixing.

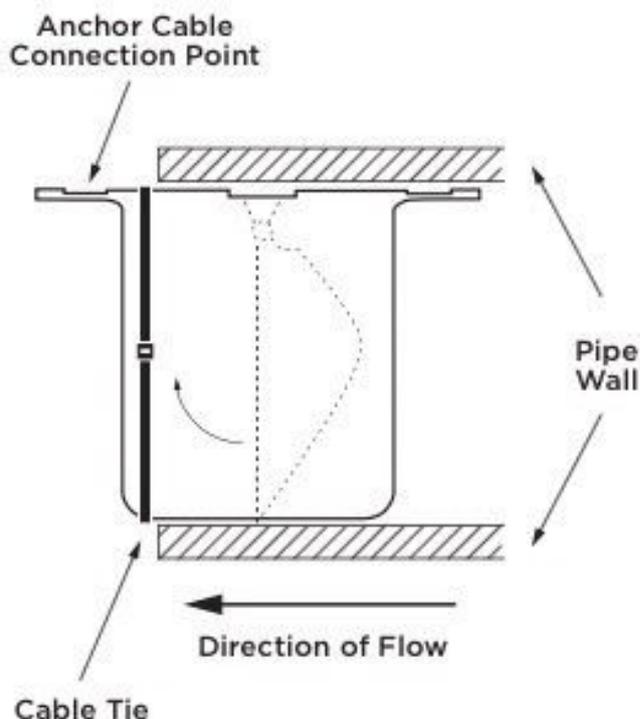

Watch our installation tutorial at www.ratgate.co.uk